


DELUXE CART ASSEMBLY INSTRUCTIONS

MODEL # NOVO30GB / NOVO36GB / NOVO42GB

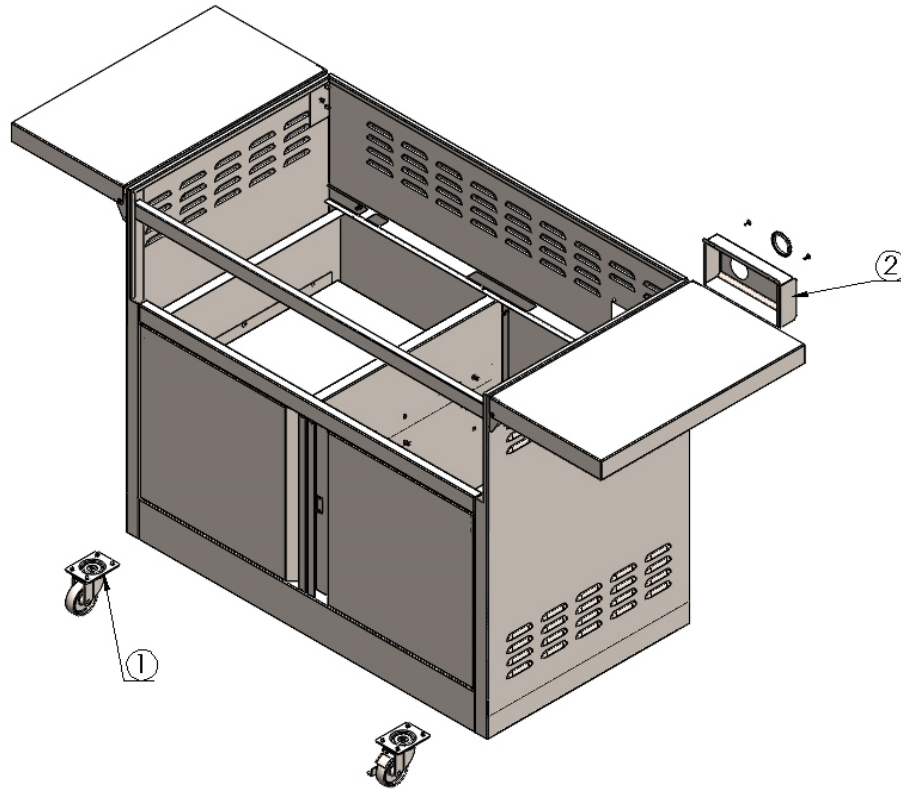

STEP 1: Two (2) people recommended for this assembly. Remove packaging and protective film from surface of cart (it is normal to see residue from protective film and recommended to wipe down cart with stainless steel cleaner once removed).

STEP 2: Lean Cart backwards onto a protected surface. Attach four casters (#1) using 4 pcs of 10-24 screws per caster (Place locking casters in rear positions).

STEP 3: Using screws provided attach the rear gas cover plate (#2).

NOTE: Mounting hardware to secure the transformer on to the rear of the cart is included